


HALLO

one-touch labeler

1YS

INSTRUCTION MANUAL

146+
148

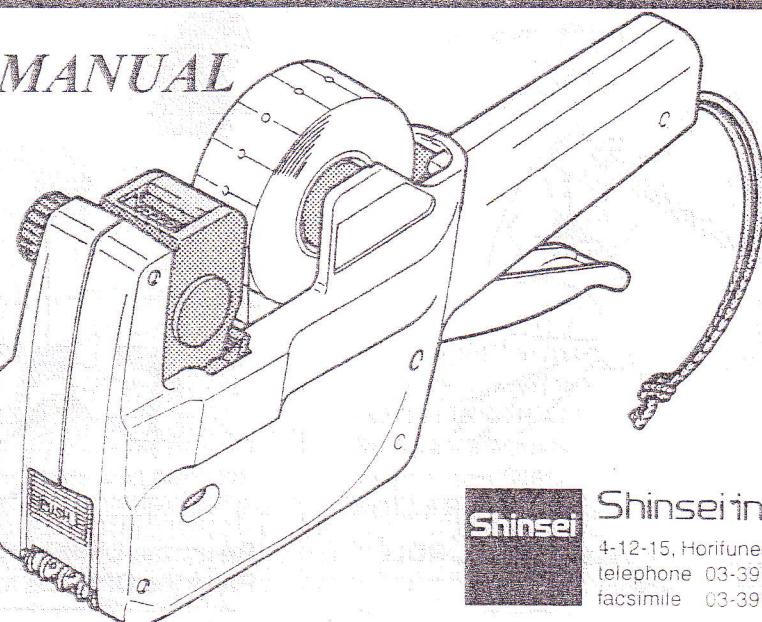

Shinsei

Shinsei industries co., ltd.
4-12-15, Horifune Kita-ku, Tokyo 1140004 Japan
telephone 03-3913-0395
facsimile 03-3913-9607

PART NAME

LABEL HOLDER

STAMP ASSY.

INDICATOR

DIAL SHAFT

OPENER

FRONT ROLLER

WRIST STRAP


LEVER

INK ROLLER SET LEVER

STAMP RECEIVER


TO LOAD LABEL

1

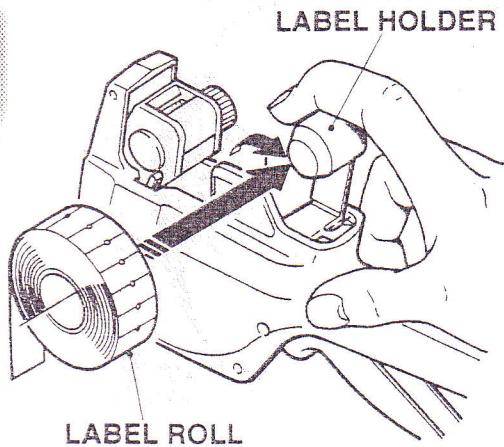

LABEL ROLL

2

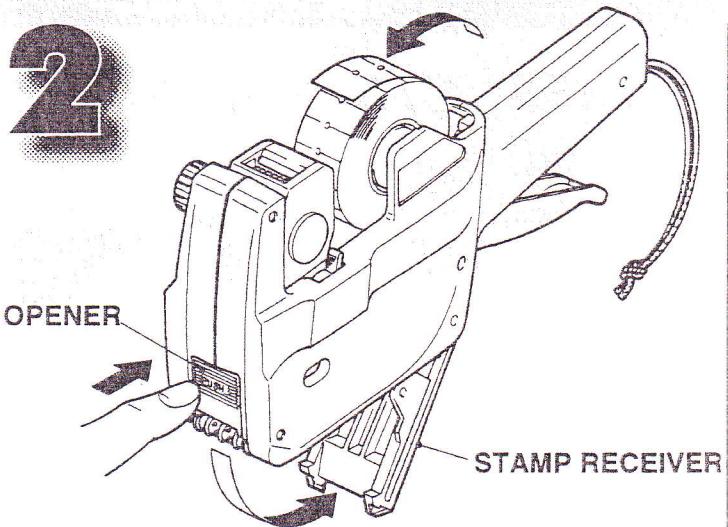

OPENER


STAMP RECEIVER

Pull up the **LABEL HOLDER** to insert a **LABEL ROLL** from the side to the arrow direction.

Return the **LABEL HOLDER** to the set position.
Press the **OPENER** to open the **STAMP RECEIVER**.

5

Put the **FEEDING HOLE** of **LABEL** to the **DRUM TEETH** with a finger supporting the label and grip the main lever several times to make the label move around toward the tape cutter.

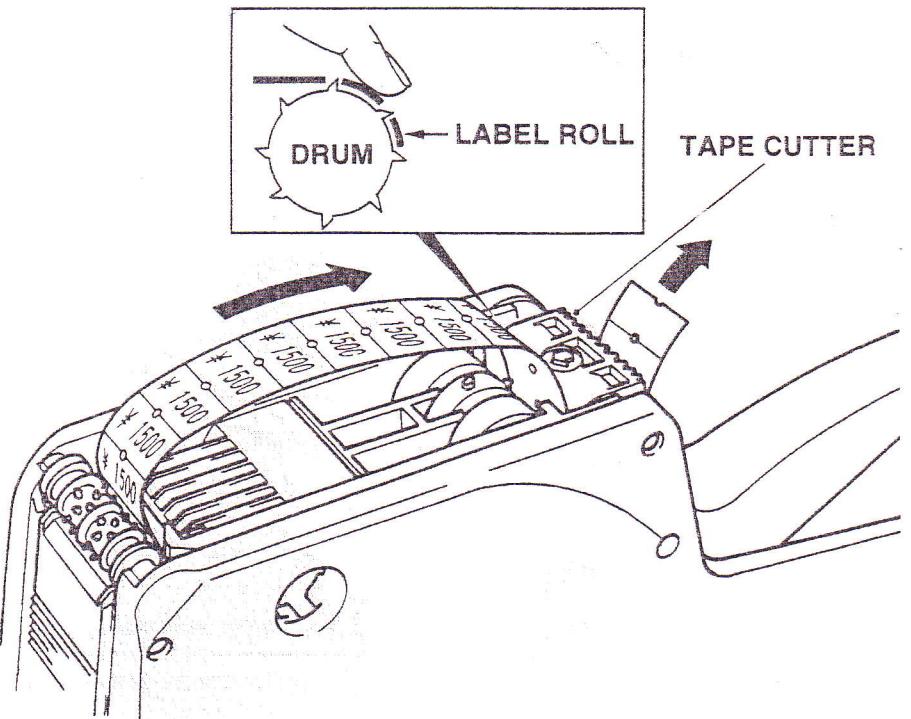


LABEL ROLL

FEEDING HOLE

STAMP RECEIVER
DRUM TEETH

3

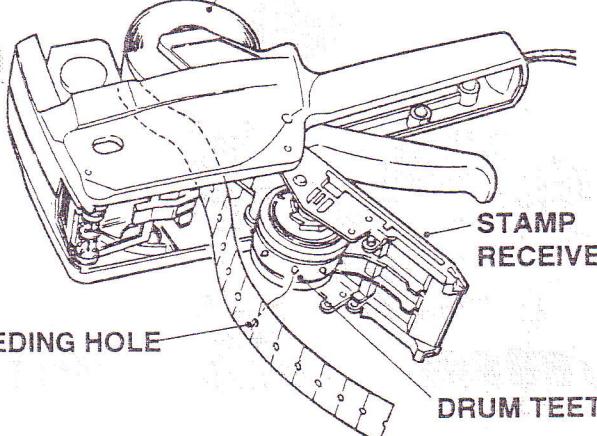


Pull the **LABEL** through the body till the tip of the **LABEL** comes to cover the length of the **STAMP RECEIVER** and place a **FEEDING HOLE** to a **DRUM TEETH**.

FRONT ROLLER

LABEL


STAMP RECEIVER

4

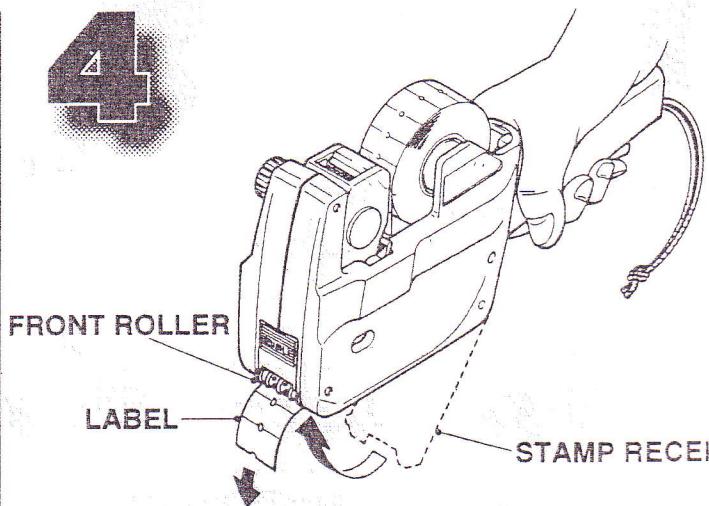

Push up the **STAMP RECEIVER** till it clicks for complete closure. Repeatedly squeeze the lever for imprinting.


Swells on both sides at the edge of **STAMP RECEIVER**.

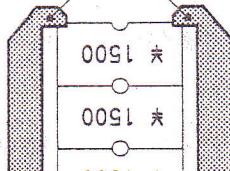

6. Pull the label through a slit between the edge of the **STAMP RECEIVER** and two swells on both sides.




Be sure to put **LABEL** through the slit.

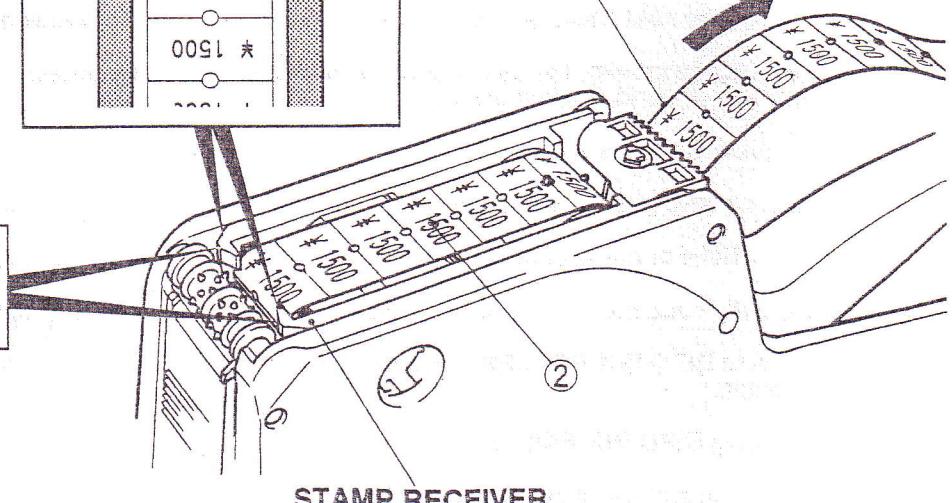


- Pull the label which comes through the **TAPE CUTTER** (1) and stretch the label tight (2) toward the arrow direction.

TO TEAR OFF BACKING PAPER

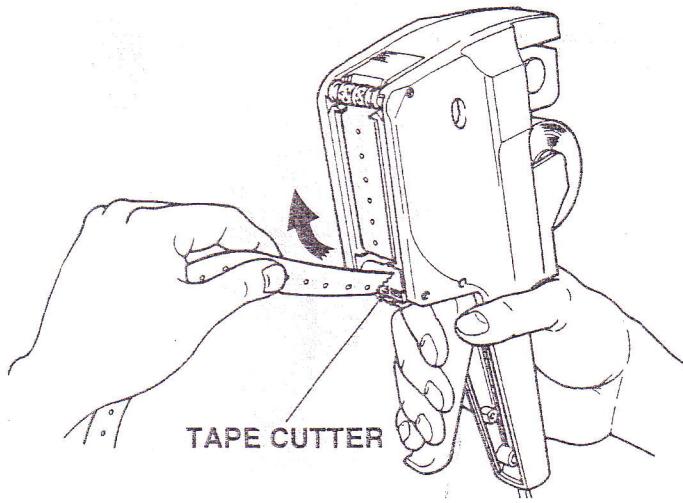

Cut the backing paper, using the **TAPE CUTTER** pushing one side of the backing paper slanted to the cutter.

TO SET PRINT DIGITS

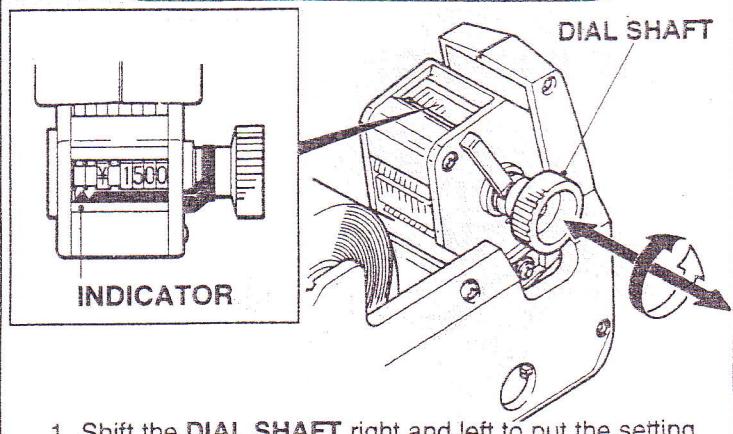


1. Shift the **DIAL SHAFT** right and left to put the setting mark to a desired row.
2. Turn the dial shaft for the desired printing characters to be arranged in the indication window.
3. Be sure to push the dial shaft back to the far left position after setting up the required characters. No printing can be made when the **DIAL SHAFT** is drawn out.

TO ADJUST IMPRINT POSITION

*Right-hand side

STAMP SETTING SCREW

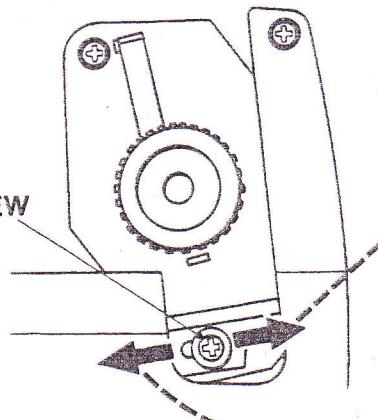


1. Loosen the **STAMP SETTING SCREW** on both sides. Move the stamp assy forward or backward to adjust imprint position.

- When moved forward, imprint position goes up.(See the drawing **A**)
- When moved backward, imprint position goes down.(See the drawing **B**)

2. Screw up the both screws to set.


*Left-hand side

STAMP SETTING SCREW

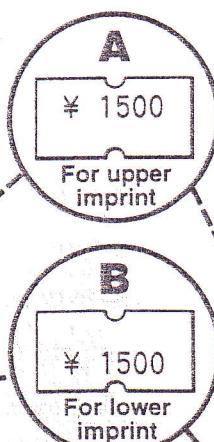


Left-hand side screw shows up to the hole when lever is squeezed.

TO TEAR OFF BACKING PAPER

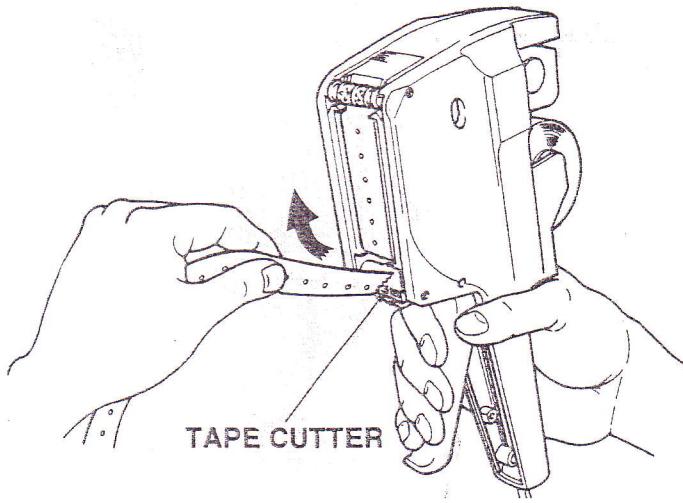

Cut the backing paper, using the **TAPE CUTTER** pushing one side of the backing paper slanted to the cutter.

TO SET PRINT DIGITS

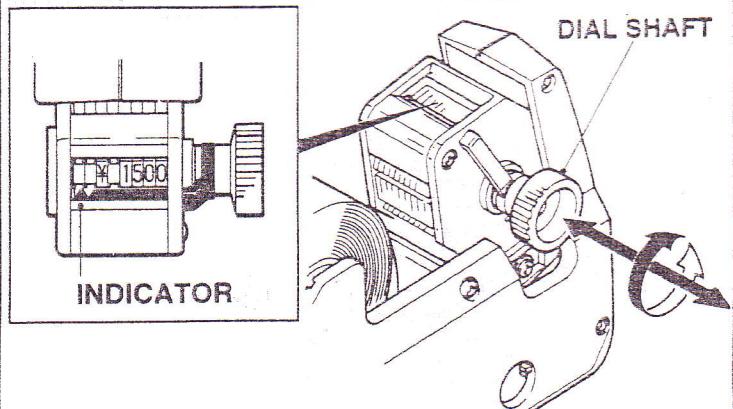


1. Shift the **DIAL SHAFT** right and left to put the setting mark to a desired row.
2. Turn the dial shaft for the desired printing characters to be arranged in the indication window.
3. Be sure to push the dial shaft back to the far left position after setting up the required characters. No printing can be made when the **DIAL SHAFT** is drawn out.

TO ADJUST IMPRINT POSITION

*Right-hand side

STAMP SETTING SCREW

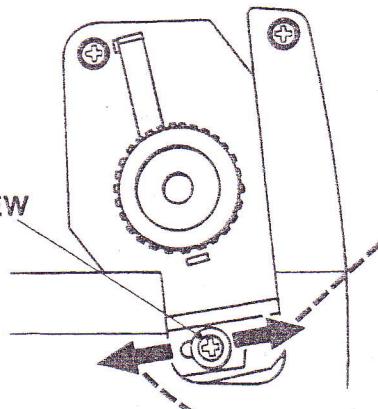


1. Loosen the **STAMP SETTING SCREW** on both sides. Move the stamp assy forward or backward to adjust imprint position.

- When moved forward, imprint position goes up.(See the drawing **A**)
- When moved backward, imprint position goes down.(See the drawing **B**)

2. Screw up the both screws to set.

*Left-hand side

STAMP SETTING SCREW

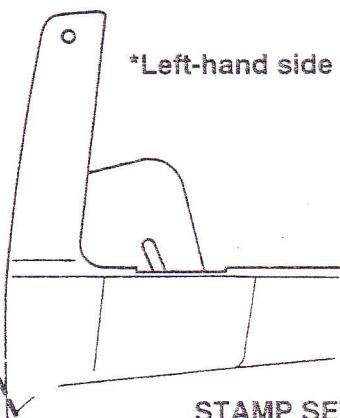

Left-hand side screw shows up to the hole when lever is squeezed.

CORRECT USE


1



Squeeze!

Fully squeeze the lever to imprint the label clearly. Insufficient squeezing may cause unclear imprint.

2

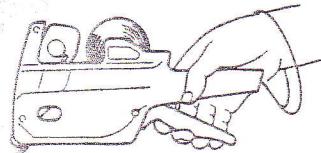

Release!

Release the lever entirely.
At this moment, label proceeds.

3



Affix!

Lightly touching the object, make roll-on action in order label to be affixed perfectly.

RECOMMENDATIONS

1. Be sure to load **DIPO INK ROLLER** before operating the main lever in order to avoid mechanical trouble.
2. Avoid exposing to heat sources since plastic is used for main parts including body to lighten the weight.
3. When cleaning the labeler, the use of benzine or alcohol is recommended.
Do not use any solvents against plastic.
4. Since this price marker is a precision products, avoid dropping or rough handling.
5. When labeling solid materials such as can, do not use it hitting such materials.
6. Use Shinsei Make or our specified labels. Malfunction of labeler by using other label is out of our responsibility.
7. The **DIPO INK ROLLER** is of throw-away type. When printing gets pale, replace with a new **DIPO INK ROLLER**.
8. Do not re-fill to **DIPO INK ROLLER**. Ink only puts on around the ink roller and it will be a cause of mechanical or printing trouble.
9. When replacing **DIPO INK ROLLER**, be careful not to ink your fingers.
10. Do not touch the surface of labels immediately after printing to avoid inking your fingers/hands.